


Pharmacy Refrigerator

Operation Manual

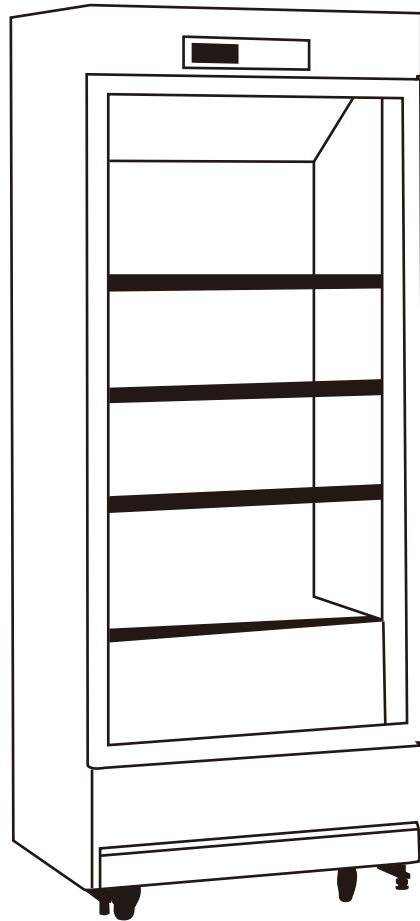

SPR-426

Statement:

Thank you for buying our medical refrigerator. For your safe and convenient use and reasonable maintenance of the product, please read the operation instruction carefully and keep it properly for reference. For damages of any instrument due to the fact that the user does not use the product according to the instrument operating environment declared in the handbook or injuries due to the fact that individual does not operate the product according to safety instructions, we have no obligations and responsibilities to be in charge of them.

The user must accomplish the following three points when using the product:

1. Always use protective devices correctly (including clothes, gloves, goggles, etc.);
2. Always adopt good health habits and operate strictly according to the product instruction;
3. Everyone is obliged to be in charge of one' own safety.
4. Not Allowed direct contact with patients, use or affect the product and in the product storage items.
5. Products without sterilization.
6. The product is used only for storage, not during use with other materials, Organization and Technology in combination.
7. Products can not be used to measure or analysis.
8. Life and storage life of the products is irrelevant.
9. Some models need to regularly add supplies, such as printer paper, test tubes, etc.
10. This product is non-explosion-proof products.
11. Non flash freeze equipment, is limited to keeping the temperature used.

Due to our fast product update, there may be differences between function of the product you bought and the function mentioned in the instruction, please in kind prevail.

Safety Instruction:

- Please read the handbook carefully when using the machine for the first time.
- The medical refrigerator can only be operated by trained and authorized personnel.
- The maintenance of the equipment can only be accomplished by professional service team
- If operator runs into conditions not mentioned in the instruction, please contact us for inquiring correct processing method.
- Please use accessories provided by our company. if user uses other accessories, our company not take charge of generated negative effects. however, the user can apply to us to test and verify that whether the accessories accord with the requirements of our company.
- It is necessary to inspect and maintain the medical refrigerator at specified time intervals.
- The medical refrigerator is strictly prohibited to store living things or other goods which have strict temperature requirement and are unsuited for storage at constant temperature.
- The medical refrigerator realizes refrigeration through the heat dissipation of the back surface (condenser). In order to ensure normal operation and ventilation and heat dissipation, the back and the left and right sides of the refrigerator body should be at least 30cm away from the wall and no barriers are allowed to block the air inlet and the air outlet.
- In case of machine fault or power failure, the temperature in the medical refrigerator will rise. If the machine cannot be repaired in short period, please take out the stored goods and transfer them to other place where accords with the storing temperature to avoid damages.

Contents

I. Diagram and Introduction of Product.....	4
II. Preparation and Attention before Use	5
III. Instructions	6
3.1 First use.....	6
3.2 Temperature regulation	7
3.2.1 Key function	7
3.2.2 Parameter setting method	8
3.2.3 USB Function setting.....	9
3.2.4 Printer function setting.....	9
3.2.5 SMS alarm function settings(Only supported by mainland China)	10
3.2.6 Alarm code	10
3.2.7 Error display	11
IV. Routine Maintenance.....	12
4.1 Clean of incubator	12
4.2 Defrost.....	12
4.3 Care and maintenance	12
V. Clearing of Fault and Maintenance Service	13
VI. Main Performance Index.....	13
6.1 Main technical parameters.....	13
6.2 Electrical schematic diagram	14
VII. Packing list	14

I. Diagram and Introduction of Product



Diagram I : Structural diagram

Due to the improvement and various models of products, the actual product may be different from the diagram, please in kind prevail!

Medical refrigerator series products are applied to places needing storage at constant temperature, such as hospitals, epidemic prevention stations, blood banks, scientific research institutions, colleges and universities, biological pharmacies, genetic engineering, entrepreneurs, etc. The storing temperature in the body can be regulated by the temperature button on the control panel. The application is convenient and the performance is reliable.

II. Preparation and Attention before Use

- Transport: the refrigerator should be uplifted from the bottom and carried and put down lightly. The inclined plane should be no larger than 45 degrees.
- After installation, keep the device standing for 12 hours at least to return the compressor oil.
After installation and first use testing, please adjust the castors to fix the device.
Do not hold the door or the lining port as stressed member.
Dismantle all package components (including protection foam in the refrigerator body).
- Please check accessories and data according to the packing list.
- Please clean the product before use.
- The product has self closing components, with door closed function, please pay attention when opening the door to pick up the goods.
- Operating environment requirements:
 - For indoor use only;
 - The mounting surface must be fixed, horizontal and incombustible and be able to bear weight during the operation of the medical refrigerator;
 - To be placed away from direct glare of sunshine and heat and the environmental temperature should be not higher than 32℃.
 - Space of above 30cm is required to be left around the medical refrigerator for ventilation and heat dissipation;
 - Not allowed to be placed in the environment under 0℃;
 - Not allowed to be placed at places with heavy moisture or easy-splashing water.
 - Ambient non corrosive, flammable, explosive gas, liquid or dust.
 - The surrounding environment must be kept well ventilated.
 - On flat ground, the medical refrigerator can be directly pushed to move.

⚠ Notes: please note that do not let the power line be damaged by trundles when pushing the medical refrigerator.

⚠ Notes: be sure to take off the packaging pedestal on the bottom of the medical refrigerator.

⚠ Notes: Do not put goods into the medical refrigerator which is just plugged in. Let the empty body run for a while (about 12 hours) and then put the goods to be refrigerated into the refrigerator.

Normal operating condition of the equipment:

Environmental temperature: 10℃ ~ 32℃;

Relative humidity: ≤80 %;

There is no strong sharp pounding and corrosive gas around;

There are no effects of direct radiation of sunshine and other cold and heat sources.

Working system of the medical refrigerator: intermittent running

Safety precautions

- Supply voltage: the equipment needs 220V/50Hz alternating current power supply. If the service voltage is lower than 187V or higher than 242V, it is necessary to add a proper automatic voltage regulator to be used cooperatively;
- When the medical refrigerator is used, the power supply is required to be equipped with a lower voltage air circuit breaker and a leakage protection device;
- It is necessary to use a dedicated independent socket which is grounded reliably. The length of the power line cannot be lengthened at randomly. If it really needs to be lengthened, be sure to use a copper core conductor which is larger than 2.5mm². And the cross area of the copper core conductor which is in the wall and connected with the power socket must be above 4mm²;
- Inflammable and explosive dangerous goods and goods of acid and alkali etc. with strong corrosiveness are not allowed to be put into the medical refrigerator;
- Keys should be kept properly to avoid accidents that will happen if children get the key to open the door; the zero line (N end) of the socket cannot be connected with the ground lead (E end). Otherwise, the housing of the medical refrigerator may be electrified and electric shock accidents may be caused;
- The power line cannot be bundled up, pressed underweight and next to heat sources of compressor, etc.

III. Instructions


3.1 First use

- After being unpacked, the medical refrigerator should be placed well to according to the service environment requirement;
- Although the refrigerator has been cleaned inside when leaving factory, it is advised to scrub the medical refrigerator with warm water added with a little neutral detergent and then scrub it with clean water and wipe it up (electrical system cannot be cleaned but scrubbed with dry cloth);
- Set the temperature controller of the medical refrigerator at 5℃ and turn on the power. After 3 minutes, the compressor is started. After 30 minutes, the temperature inside the medical refrigerator decreases obviously. It means the refrigerating system is operating smoothly and the machine test is finished;
- For first use, it is advised to put the goods to be stored in the refrigerator after the inside temperature falls to the operating temperature. If there are too much goods to be stored, it is advised to store separately for three times. When the inside temperature of the refrigerator falls to the set temperature after the storage of the last time, store the goods for the second time. Storing too much goods at one time may cause that the refrigerator cannot fall to the set temperature for a long time, thereby causing damages of goods;
- In order to save electrical energy, please try to reduce door-opening frequency and open time.

3.2 Temperature regulation

3.2.1 Key function

The electric temperature controller is installed on the control panel of the medical refrigerator. When power is on, the digital display screen can display the actual temperature inside the refrigerator. The control panel of the temperature controller is illustrated by the following diagram:

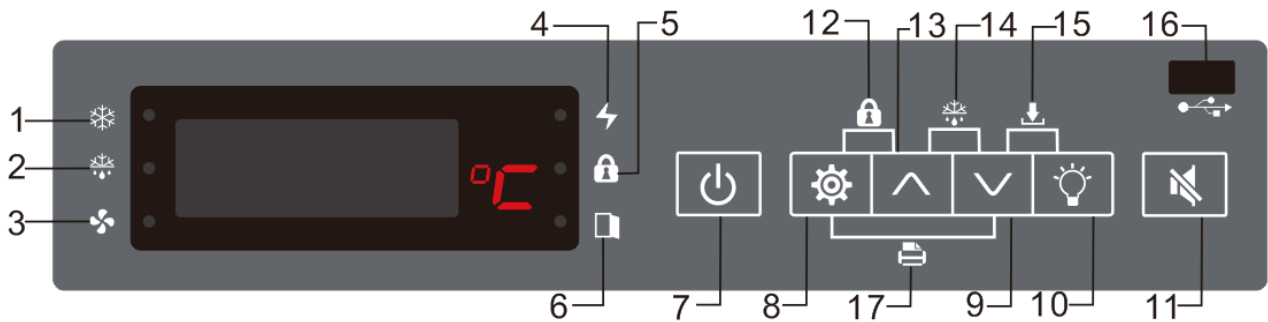

- 1.Cooling Lamp
- 2.Defrost Lamp
- 3.Fan Status Lamp
- 4.Power Lamp
- 5.Keyboard Lock Lamp
- 6.Door Open Lamp
- 7.Power Switch
- 8.Setting
- 9.Down
- 10.Lamp Switch
- 11.Mute
- 12.Keyboard Lock(Combination)
- 13.Up
- 14.Defrost(Combination)
- 15.Download(Combination)
- 16.USB Port
- 17.Print(Combination)
- Please do not change the settings when normal using. Press “Mute” to stop buzzing if necessary when alarmed, but the alarm lamp and code will keep displaying until the alarm disappear. For special using, please contact our authorized service engineer before adjust the settings. Wrong operation may cause abnormal working of the device, such as bad temperature uniformity and abnormal high/low temp. Alarm.
- When the refrigerator is in normal service condition, it is advised not to regulate the set temperature randomly. You can press the Mute key to cancel alarming voice prompt if necessary. But the alarm light and alarm codes will always display until the alarm status is released. If needing special regulation, please call at after-service phone or resort to professional maintenance personnel. Radon regulation of

the set temperature may cause high temperature (AH) of product or constant temperature (AL) alarm. Right now, please regulate the high and constant temperature values (AH, AL) simultaneously. Notes: the general high and low temperature alarm values are within the set temperature range of $\pm 5^{\circ}\text{C}$.





- When normal working, press to check high and low temperature record.
- Steps: highest temperature → HT date → HT hour → HT minute → lowest temperature → LT date → LT hour → LT minute
- EG: Press for a short time, display “9.6”(highest temperature) → press , display “HD25”(HT date) → press , display “HH15”(HT hour) → press , display “HE09”(HT minute) → press , display “2.3”(lowest temperature) → press , display “LD25”(LT date) → press , display “LH18”(LT hour) → press , display “LE22”(LT minute) → press , display “9.6”(highest temperature) again.
- The display will back to normal temperature display after 5s no operation.
- When normal displaying, press , the display will show input voltage, battery level percentage and current time.
- EG: U220(voltage) → B_90(battery level) → Y_16(year) → N_01(month) → D_01(date) → H_01(hour) → E_01(minute) → S_01(second)

When normal displaying, press  ≥ 5s to enter date time setting menu.

Code	Description	Category	Min	Max	Unit	Default
Y_	year	time	00	99	-	16
N_	month	time	1	12	-	01
D_	date	time	1	31	-	01
H_	hour	time	1	24	-	00
E_	minute	time	1	60	-	00
S_	second	time	1	60	-	00

3.2.2 Parameter setting method








When the power of the medical refrigerator is on, the display screen displays the inside current temperature value. If the set temperature has to be readjusted, for example, the original set temperature is 2°C which now has to be adjusted to 5°C , please operate according to the following steps:

NO.	Keys Operation	Display
1		Displays the inside temperature
2	Press the Set key  for 3 seconds	Displays that the initial set value is 2°C and twinkles
3	Press the Up-regulation key 	Figure increases
4	Press the Down-regulation key 	Figure decreases
5		Figure is 5°C
6	Press the Set key  for 3 seconds	Saves the user settings and displays the inside temperature





Note: Please repeat the steps to ensure the right operation

Notes: If there is indeed parameter change requirement, please contact the after-sale and distributors.





The display screen will display current inside temperature when normal working. If the DOG(temp. Record interval) has to be readjusted from 10mins to 15mins, please operates according to the following steps:

NO.	Keys Operation	Display
1		Displays the inside temperature
2	Press the Set key  for 5 seconds	Displays the PS, and twinkles
3	Press the Up-regulation key  or Press the Down-regulation key 	Select the first layer parameter that you want to modify until the DCG appears
4	Press the Set key 	Enter specific numerical adjustments
5	Press the Up-regulation key  or Press the Down-regulation key 	Change the value from the original value from 10 to 15
6	Press the Set key  for 5seconds	Saves the user settings and displays the inside temperature

3.2.3 USB Function setting

-  +  = USB data download combination key
- Normal display mode,Just press the interface.
-  +  ≥ 3s, Inserted into the U disk, the USB data is started, on the contrary, The AUO blinks 3 times, To ensure data copies are normal, use the U disk of the USB2.0 Temperature controller data storage interval adjustable, (the relevant parameter code is DCG, data storage interval, the specific setting method refer to the first layer parameter adjustment in 3.2.2), The data can be stored in 50000 groups, the longest can be stored data for 10 years. When the data storage reached the upper limit, it will start from the first data coverage.

3.2.4 Printer function setting

-  +  = Print output key
- Normal display mode, press the  +  ≥ 3s, Print real time temperature, In normal normal display mode, print automatically once every other period of time, The printing time interval is adjustable (the related parameter code is DCG, the data storage interval, and the specific setting method refers to the adjustment of the first layer parameter in 3.2.2)
- This feature is optional, requiring additional equipment, while ensuring that the products you purchase support the addition of this feature.

3.2.5 SMS alarm function settings(Only supported by mainland China)

- Use the needle type to hold the yellow dots under the slot on the phone before you power it. Turn on the slot, then put in china phone card, Install mobile phone card slot, power on use。
- Normal display mode, first change the number of mobile phones that need to be connected, and CD11 represents the first three of the first cell phone number, CD12 stands for the middle 4 of the first cell phone, CD13 represents the first 4 cell phone numbers of the first cell phone; the CD21 represents the first three of the second cell phone numbers, and the CD22 represents the middle 4 of the second phones,CD23 said the following second mobile phone 4 mobile phone number (for example, when the first mobile phone number is 01234567890 when CD11 is set to 012, CD12 is set to 3456, the specific setting method of CD13 is set to 7890 related parameters in 3.2.2 first layer parameter adjustment), When the alarm occurs, the period of the alarm SMS sending can be adjusted (the relevant parameter is CDAC, and the specific setting method refers to the adjustment of the first layer parameters in 3.2.2). In order to ensure the normal use of SMS alarm function, please use.

3.2.6 Alarm code

Alarm code	Describe	Alarm code	Describe
AH	Cabinet high temperature alarm	AS1S	Control probe 1 shorted
AL	Cabinet low temperature alarm	AS1B	Control probe 1 shorted
ADO	Door ajar alarm	AS2S	Control probe 2 shorted
ACH	Condenser Filter Clean	AS2B	Control probe 2 shorted
ACL	High Ambient low Temperature	AD1S	Defrosting _ probe display circuit
AUH	High Voltage Abnormal	AD1B	Defrosting _ probe display circuit
AUL	Low Voltage Abnormal	AC1S	Condenser probe short circuit
AUF	Power Failure	AC1B	Condenser probe short circuit
ABL	Low Battery	AO	External alarm
AUO	USB not ready	AHS	Heating relay adhesion
		AHB	Heating relay not pull in

After the power is switched off, the control function of the controller fails and the back-up source is used for displaying. If the back-up source is charged for more than 10 hours, the power failure symbol “ AUF ”, the current inside temperature and the alarm display alternatively for one time and then display again after 60 seconds' stop for cycle operation. The high temperature alarm mark light will twinkle continuously until the electric quantity of the back-up source is used up. The inside temperature can be continuously displayed during the power failure. Please pay attention to this and take relevant measures to avoid damages.

3.2.7 Error display

- When faults of the refrigerator temperature display probe including short circuit, open circuit, malfunction and incorrect connection appear, “E0” is displayed. When faults of the refrigerator temperature control probe including short circuit, open circuit, malfunction and incorrect connection appear, “E1” is displayed. At the same time, the buzzer of the temperature controller will give out alarm and the display screen displays corresponding alarm parameters (E0、 E1).
- Suggest: If you judge that the temperature sensing probe goes wrong, you should cut off the power and first check whether the connecting wire of the temperature sensing probe is loose. Please contact professional after-sale personnel or distributor

! Tips: if internal code appears when user regulates the temperature controller, the user should wait for 1 minute and then operate it till the inside temperature is displayed to avoid fault of the medical refrigerator caused by the change of the control parameter.

- When the medical refrigerator stalls temporarily due to power failure or other faults, the inside temperature of the medical refrigerator will rise from 5℃ to 15℃ within 1 hour. If power cannot be supplied in short time, the user should consider taking out the stored goods and putting them into other normal medical refrigerators for storing to avoid losses caused by the damages of the stored goods.
- Before putting goods into the medical refrigerator to be stored, the user should confirm in advance that whether inside temperature of the medical refrigerator is in accordance with the set temperature for storing to avoid losses caused by goods damages due to the improper temperature.
- Due to the refrigeration inertia, the medical refrigerator cannot be kept at constant temperature. And there is certain up and down difference between the inside temperature and the set temperature. The inside temperature varies with the change of the service environment and the set temperature. It belongs to normal phenomenon.

IV. Routine Maintenance

In routine maintenance, in order to prevent electric shock or personnel injuries, be sure to cut off the power before repairing or maintaining the equipment and do not inhale drugs or particulate matters surrounding the equipment when maintaining the equipment. It is necessary to dry wet gloves to protect your hands. Otherwise, your hands may be cut by edges or corners of the refrigerator body.

4.1 Clean of incubator

- The medical refrigerator should be cleaned once every month. Regular cleaning may keep the appearance of the incubator new;
- Use dry cloth to wipe off a small amount of dust on the housing, the inner chamber and all accessories of the medical refrigerator. If the medical refrigerator is very dirty, it is advised to use neutral detergent for cleaning;
- After cleaning, use cloth which has been soaked in clean water to wipe off the detergent;
- Do not pour water on the housing or in the preserve room of the medical refrigerator. Otherwise, the electrical insulation may be damaged, thereby causing faults.
- During the rainy season, vapors may be easily condensed on the surface of the glass door of the refrigerator. In serious condition, water may drip. Please use dry cloth to wipe it dry in due time. Normal use will not be affected.

4.2 Defrost

The medical refrigerator belongs to air cooling frost-less refrigerator which needs no defrosting. In summer with high environment humidity, condensation may appear on the buccal frame of the medical refrigerator. This is normal. It is advised to wipe it dry with dry cloth.

4.3 Care and maintenance

- No heavy things are allowed to be placed on the door or the header of the medical refrigerator to avoid deformation of the door body or the header caused by the press.
- The medical refrigerator should be cleaned and maintained every once in a while.
- Use warm wet soft cloth to wipe the inner and outer surfaces of the medical refrigerator.
- When serious dirt appears, use neutral detergent for washing tableware to wipe and then use cleaned soft cloth to wipe out the water spots.
- Once starting the medical refrigerator, you'd better keep it running continuously.

! **Notes: be sure not to sprinkle water directly on the medical refrigerator to avoid performance reduction and metal rust of electrical components. Be sure not to clean the medical refrigerator with hot water and corrosive detergent or organic solvent. Also do not clean the medical refrigerator with scrubbing brush and wire brush. Children are not allowed to play games with the medical refrigerator.**

V. Clearing of Fault and Maintenance Service

Some abnormal conditions of the medical refrigerator are caused by misuse. Before you commit maintenance, please compare with the following table for self inspection and exclusion.

Problems	Reasons and Solving Measures
Medical refrigerator does not work	<ul style="list-style-type: none"> ·If the power socket has electricity? ·If the power socket is plugged or loosened? ·If the power fuse is disconnected? ·If the supply voltage is too low or too high?
Compressor breaks down	<ul style="list-style-type: none"> ·If the temperature setting is right?
Temperature goes on decreasing after reaching to the set value	<ul style="list-style-type: none"> ·If the temperature setting is right?
Temperature cannot reach the set value	<ul style="list-style-type: none"> ·If the fan stops running? ·If the door is not closed tight or opened too frequently? ·If too many goods are put in at one time and if the air channel is blocked off? ·If the environment temperature is too high?
Too much noise	<ul style="list-style-type: none"> ·If the refrigerator body is placed at the flat ground? ·If the refrigerator body touches the wall? ·If the incubator immediately enters operating state after being started?


If you cannot judge the fault cause or debug, please contact the local or nearby appointed service center according to the instruction of the warranty certificate (standard accessory) and tell use your name, address, phone number, type of the medical refrigerator, purchase time, fault phenomenon, etc. Professional engineer will offer warmhearted service to you.

VI. Main Performance Index

6.1 Main technical parameters

Model	Temp	Volume	Power supply	Refrigerant	Dimension
SPR-426	2~8°C	426L	220V, 50Hz	R600a	780×580×1920

6.2 Electrical schematic diagram

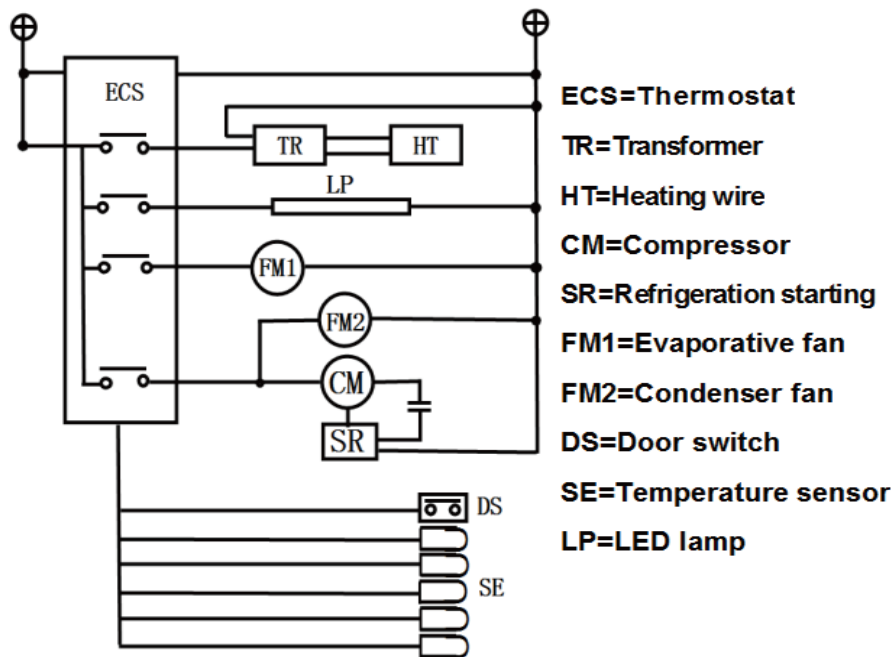

VII. Packing list

Model	Operation instruction	Shelf	Storage box	Keys	Buckle	price tag
SPR-426	1	4	1	2	16	4